
# **MODEL SC-50-RS485-BIPHASE**


# BOSCH RS-485 To BOSCH BIPHASE CODE CONVERTER

Converts Bosch RS-485 into Bosch biphase code format. The RS-485 input supports baud rates from 2400 to 19200.

The input data can be filtered to pass only camera control information.

A test mode sends a square counterclockwise movement pattern to the selected camera address. This can be use to test the configuration and connections to a camera without a controller.

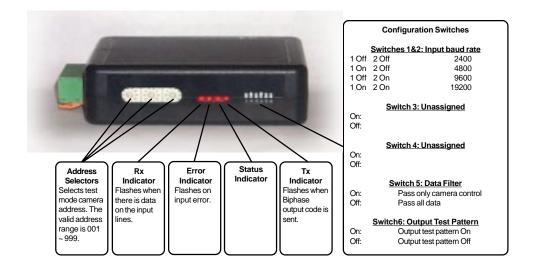

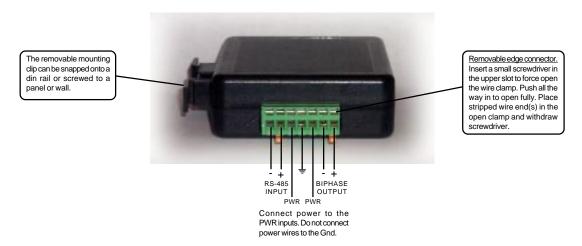

### **SPECIFICATIONS**

Size: 4.5" x 3.5" x 1.25"

Weight: 0.5 lb

Power: 9Volt to 15Volt AC or DC at 75ma

Environmental: Indoor use only

www.sennetech.net

Sennetech, Inc. 6455 W. Bath Rd, Perry, MI 48872 U.S.A. Ph (517) 675-1150 Fax (517) 675-1151

### **NOTES**

## **Switch Settings**

Any changes in switch settings are effective immediately, they are not read only on power up.

#### Switches 1 & 2

There are four selectable baud rates, 2400, 4800, 9600, & 19200. If the controller baud rate is not known, change the input baud rate until the Error LED does not flash when there is input data.

#### Switch 5

If switch5 is on, only camera control data is converted. This can reduce the amount of data on a network or RF link.

## Test mode.

When switch 6 is on, a square movement pattern is sent to the camera number selected by the test address switches. The input is disabled during test mode.

#### **Indicators**

The **Rx** LED will flash when there is any data on the input. If it is on constantly, the input lines are likely reversed.

The Error LED will flash on any input data error, such as incorrect baud rate or non-valid Bosch format.

The Status LED - not used

The **Tx** LED flashes once for each Bosch bi-phase packet sent.