


SCT-100-Pelco-Quickset Pelco RS-422 to Quickset RS-422 Code Translator Ver 1.5

The code translator converts Pelco camera control code to Quickset RS-422 code for a single P/T/Z. Only camera control code for the address matching the Address Selector switches is converted.

Input Pelco "D" or "P" code at 2400, 4800 or 9600 baud is detected automatically.

Quickset RS-422 output is 9600 N81. Either QuickEye or QPT-20 Protocol can be selected.

A test mode sends a continuous square movement pattern to the P/T so the communications from the translator to the P/T can be checked without a Pelco controller. The input receiver is disabled during test mode.

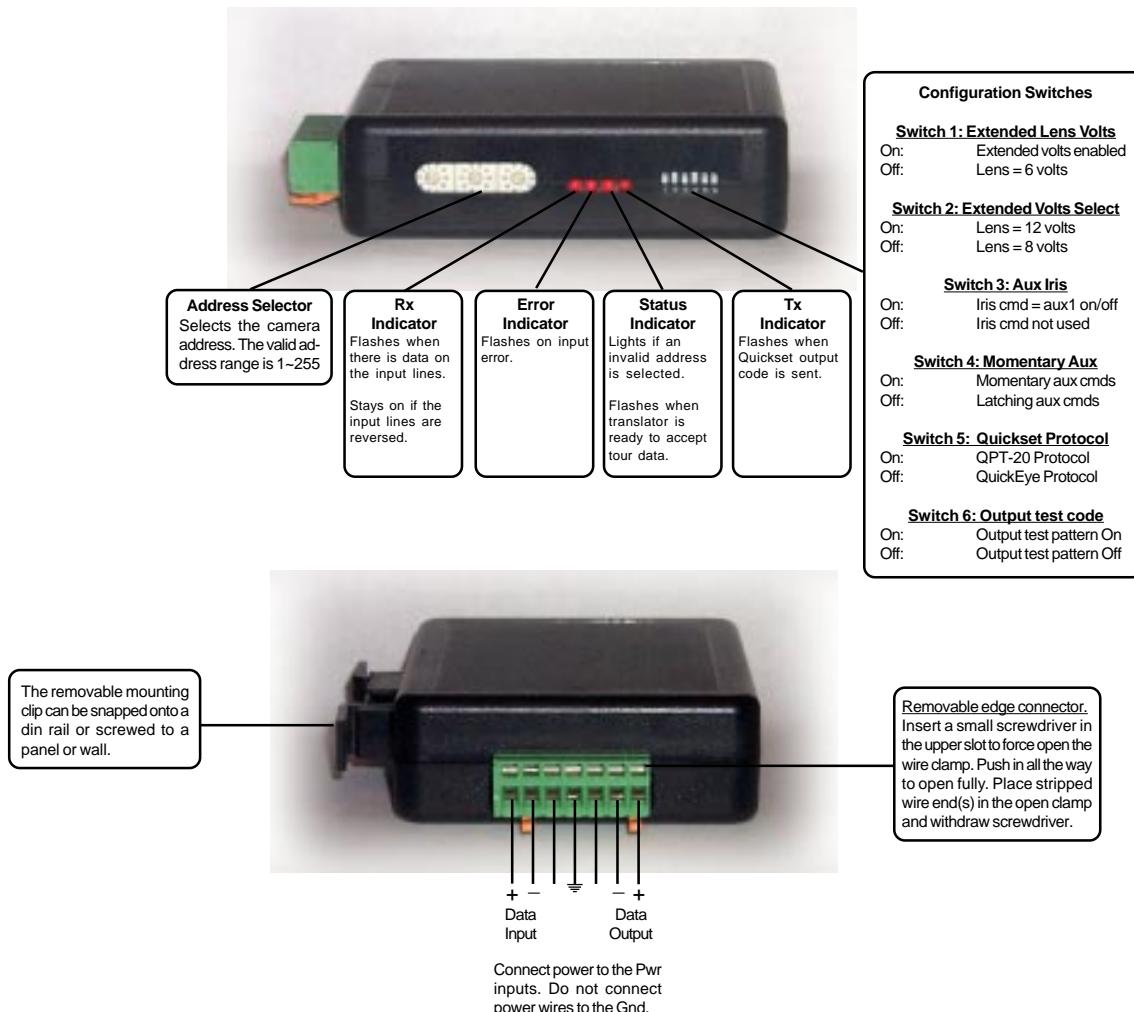

SPECIFICATIONS

Size:	4.5" x 3.5" x 1.25"
Weight:	0.5 lb
Power:	9~15 Volt AC or DC at 75ma
Environmental:	Indoor use only

Sennetech, Inc. 6455 W. Bath Rd, Perry, MI 48872 U.S.A. Ph (517) 675-1150 Fax (517) 675-1151

www.sennetech.net

NOTES

Switch Settings

Any changes in switch settings are effective immediately, they are not read only on power up.

Lens Zoom and Focus Motor Voltage

If switch 1 is off, the zoom and focus motor voltage is six volts.

If switch 1 is on the motor voltage is higher, either 8 volts or 12 volts, depending on switch 2.

Addressing

Only camera control code for the camera number set by the Address Switches is converted.

Indicators

The **Rx** LED will flash when there is data on the input. If the wires are reversed, it will stay on.

The **Error** LED will flash if the input code is not recognized as valid Pelco code.

The **Status** LED will light for an valid address setting (1~255), and flash for programing tours.

The **Tx** LED will flash for each Quickset packet sent.

OPERATION

Pan, Tilt, Zoom, & Focus

The code translator converts pan, tilt, zoom, and focus commands directly.

Note: If SW5 is on for QPT-20 protocol, there are no Lens or Aux commands converted.

Iris

If switch 3 is on , Iris close and open commands active Aux 11 and Aux 12.

If switch 3 is off, Iris commands are not converted.

Aux

If Aux 11 and Aux 12 are not assigned to Iris commands, they are included in the following table:

Pelco Command	Quickset Command
Aux 1 on	Aux 1 On
Aux 2 on	Aux 2 On
Aux 3 on	Aux 1 & 2 On
(If switch 4 is On, it will be a momentary On, followed by an Off 1/2 second later.)	
Aux 1~3 off	All Aux off
Aux 4 On	Reset P/T

Presets

Pelco presets from 1~31 are converted to Quickset presets.

Other preset commands are converted according to the following table:

Pelco Command	Quickset Command
Pgrm Preset 34	Temporarily override soft limits.
Pgrm Preset 35	Set CW soft limit
Pgrm Preset 36	Set CCW soft limit
Pgrm Preset 37	Set Up soft limit
Pgrm Preset 38	Set Down soft limit

Tours

Pelco run pattern 0~3 will start a Quickset preset tour.

To program a tour, send Pelco program pattern 0~3. This will send a Quickset "flush preset tour" command to clear any previous data. The Status Led will start flashing, indicating the code translator is ready for tour data. The tour data consists of a preset number paired with a dwell time. Use Preset command for the preset number. Use On command for the dwell time in seconds. Each time a preset number is followed by a dwell time, a Quickset "append to preset tour" command will be sent. After all the desired tour data is loaded, any command other than a goto preset will end the process and turn off the Status Led..