
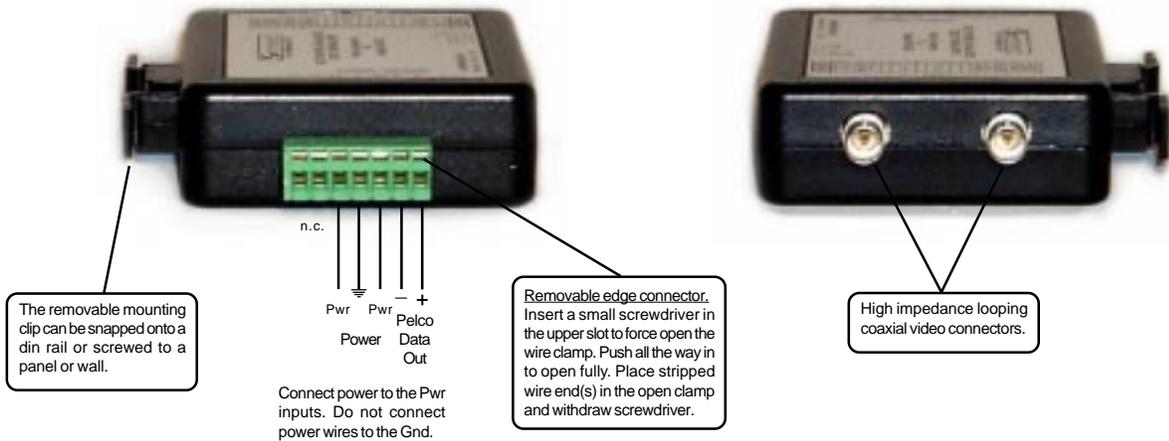


SCT-CRX-Pelco-Pelco

Pelco Coaxitron to Pelco RS-422 Code Translator

The Code Translator detects Pelco coaxitron control code and converts it into Pelco RS-422 control code for a single Pelco camera.

NOTE FOR NEW UNITS SHIPPED ON OR AFTER MARCH 01, 2016: For all new units, the baud rate selection switches now apply to both P code *and* D code. For units purchased before this date, the baud rate selection switches apply only to P code (D code set at 2400 baud only).

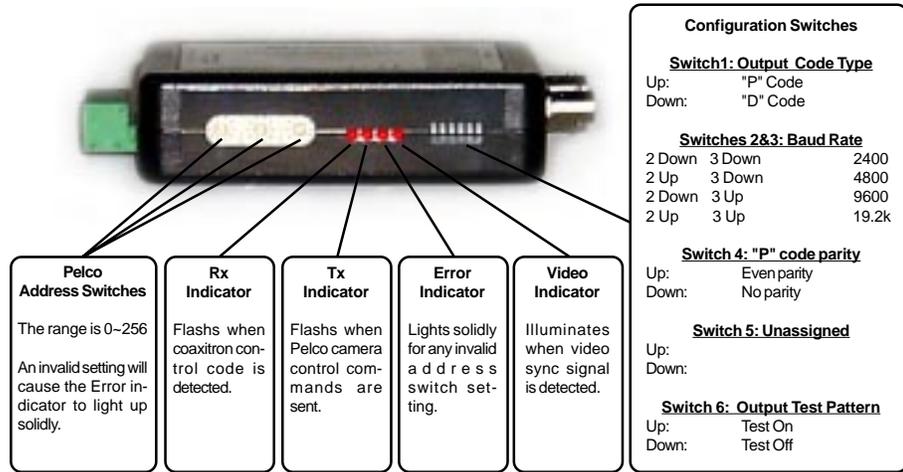

SPECIFICATIONS

Size: 4.5" x 3.5" x 1.25"
 Weight: 0.5 lb
 Power: 9Volt to 15Volt AC or DC at 75ma
 Environmental: Indoor use only


Sennetech, Inc. 6455 W. Bath Rd. Perry, MI 48872 U.S.A. Ph (517) 675 1150 Fax (517) 675 1151

www.sennetech.net

INSTALLATION

Insert the code translator in the video coaxial cable between the camera and the matrix. The video inputs are a high impedance loop so either can be in or out. Connect the RS-422 output to the camera's RS-422 in connectors. Set the output code type and baud rate to match the camera's setting. The switches can be changed with power on and the changes take effect immediately.

Set address selector switches and the camera's address to the same number. With the test pattern on, a counterclockwise square movement pattern is continuously sent to the camera. This can be used to verify communication to the camera without a coaxitron input signal

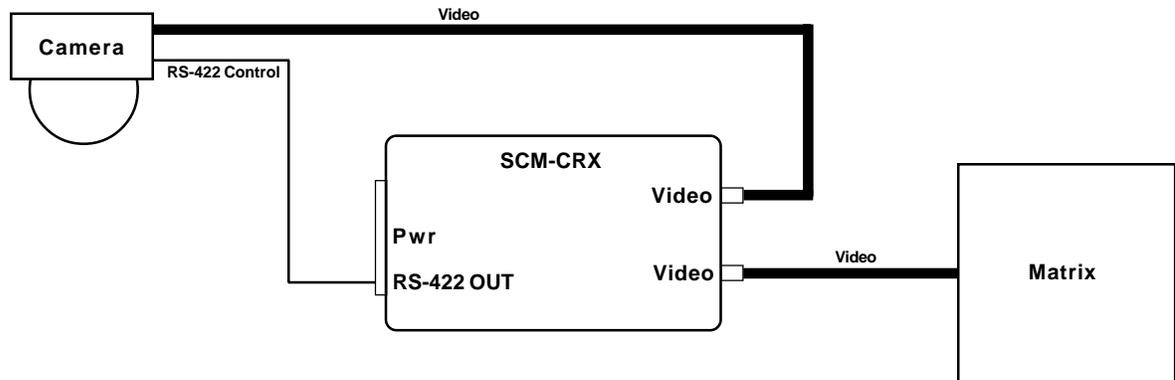

OPERATION

Operation of the coded translator is transparent to the user. The Pelco coaxitron is converted into Pelco RS-422 format.

TROUBLESHOOTING

Proper termination of the video cable is important for reliable coaxitron operation. Both the code translator and the device generating the coaxitron control code need to be synchronized to the camera's video signal. The cable should be terminated with a single 75W resistor.

The video indicator will light when there is video present from the camera on the coaxial cable.

When coaxitron control data is detected, the Rx indicator will light and the TX indicator will also light as the Pelco RS-422 code is sent. While a camera is moving, the Rx indicator will continue to flash at a high rate, but the Tx indicator will only flash for new commands or speed changes. If the Rx indicator flashes intermittantly, check for proper termination.

If an invalid Pelco address is selected, the error indicator will light until this is corrected.

If the indicators show normal operation but the camera does not respond, the data is either not getting to the camera or the code translator and camera have different data or address settings. The test mode is useful for solving these problems. When the test switch is on, different code, baud rate, and address settings can be selected to try to find a combination that works.